



**Enter VFO mode – Press the [V/M] (middle right corner of the keypad) to switch from Memory mode to VFO mode.**

**Enter the frequency you want to program – Use the keypad to enter the frequency number.**

**Enter a tone (if required)**

- **Press the [DISP] key for more than one (1) second**
- **Turn the knob to “4 SIGNALING”, then press [DISP] to select**
- **Turn the knob to “11 SQL TYPE”, then press [DISP] to select**
- **Turn the knob to select “TONE”  
(Choose TSQ to transmit AND receive the tone)**
- **Press the [DISP] key for more than one (1) second to save**
- **Turn the knob to “12 TONE SQL FREQ”, then press [DISP] to select**
- **Turn the knob to the tone frequency, then press [DISP] to select**
- **Press the [DISP] key for more than one (1) second twice to exit**

**Save the frequency in a Memory Channel (optional)**

- **Press and hold the  key for more than 1 second**
- **Rotate the dial to select to the Memory channel (available locations are indicated by an empty page in the upper left corner)**
- **Press the  key to save**

**Automatic Repeater Shift Override (optional)**

- **Press the [DISP] key for 1 sec**
- **Rotate the dial and select 7 CONFIG by pressing the [DISP] key**
- **Rotate the dial and select 15 RPT SHIFT by pressing the [DISP] key**
- **Rotate the dial to “SIMPLEX”**
- **Press the PTT key to save**