

Enter VFO mode – Press the V/M (middle right corner of the keypad) to switch from Memory mode to VFO mode.

Enter the frequency you want to program – Use the keypad to enter the frequency number.

Enter a tone (if required)

- Press the DISP key for more than 1 second
- Touch “SIGNALING”
- Turn the knob and touch “11 SQL TYPE”
- Turn the knob to select “TN”
- Press the BACK key
- Turn the knob and touch “12 TONE SQL FREQ”
- Turn the knob to select the tone frequency
- Press the BACK key three (3) times

Save the frequency in a Memory Channel (optional)

- Press and hold the **FMW** key for 1 second
- Rotate the dial to select to the Memory channel (available locations are indicated by an empty page in the upper left corner)
- Press M.WRITE key to save

Automatic Repeater Shift Override (optional)

- Press the **DISP** key for 1 sec
- Rotate the dial and touch 7 CONFIG
- Rotate the dial and touch 15 RPT SHIFT
- Rotate the dial to “SIMPLEX”
- Press the BACK key three (3) times